


## Content



1x MOUNTING SCREW M4

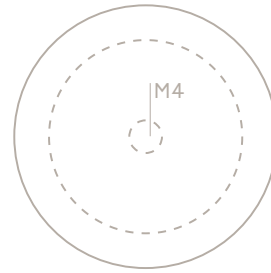


1x PARASOL

## Mounting

It's a matter of taste. You can mount your PARASOL handle where you think it looks the best.

We like to place them like this:  
39mm from the front edge and  
39mm from the side edge.

1. Mark the position of the drilling holes on the front side of the doors using a drilling template
2. Drill the holes for the screws from the front side of the doors

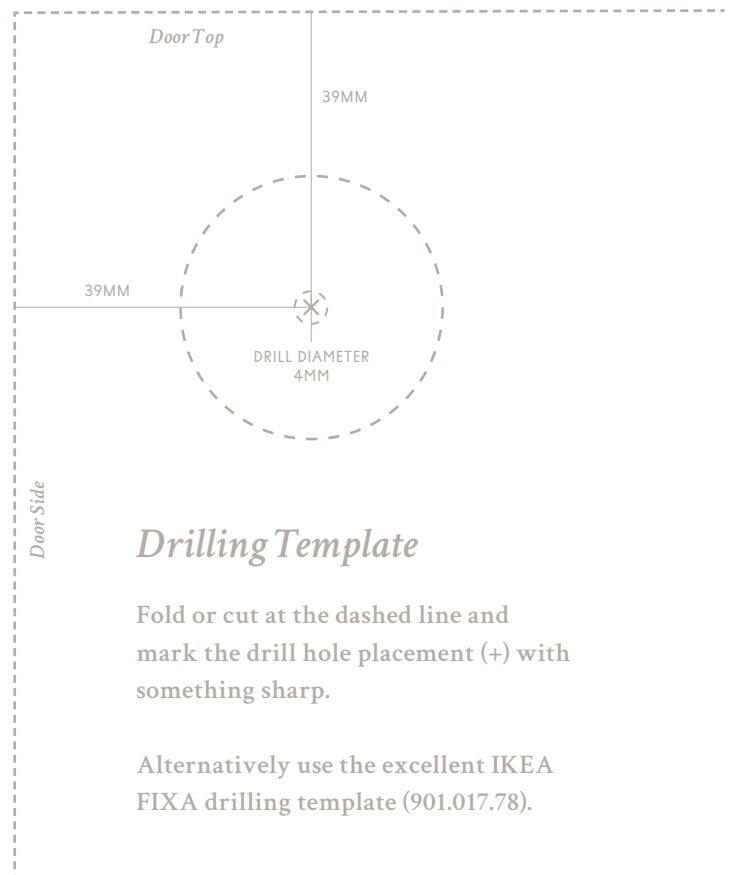

## Safety

Be sure to always follow the safety instructions that apply to your IKEA cabinet frame. Always secure the cabinet to the wall. This also applies to low cabinets where the weight distribution changes drastically when the doors are opened. Especially in the case the solid A.S.Helsingö doors. Use the anchor brackets supplied with the IKEA cabinet frame.

*We are happy to help!*

Email: [info@helsingo.com](mailto:info@helsingo.com) Phone: +358 20 718 1510